


DO NOT REMOVE

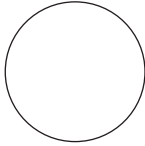

STYLE 350 ULTRASEAL® FLANGED END VALVE


IMPORTANT – SEE WARNING ON REVERSE SIDE FOR VALVE INSTALLATION PRECAUTIONS – The following precautions must be followed to prevent possible valve flange damage and to assure safety in valve operation and maintenance.

1. Pipe flanges that mate with valve must be parallel and aligned properly to prevent undue pipe bending stresses.
2. Standard full-face gaskets with O.D. larger than bolt circle are recommended.
3. Flanges are drilled to 150 lbs. ANSI bolt diameter and bolt circle dimensions.
4. The flange bolts should be tightened using a cross bolt tightening technique for uniform gasket and bolt loading.
5. **Threaded end valves** – Clean and lubricate the pipe-end threads. The recommended installation torque is 135 foot pounds.
6. No lubrication is required for the life of the valve.
7. Prior to any valve repair – consult Dresser for instructions and details. If valve disassembly is required, always open valve and be certain no pressure is in the system.

**Part No. 0001-0528-999
10.2018**

-OVER-

DO NOT REMOVE

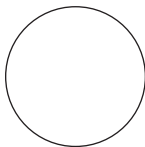

INSTALLATION INSTRUCTION 0001-0528-999

STYLE 350 ULTRASEAL® FLANGED END VALVE

⚠ WARNING ⚠

**NEVER DISASSEMBLE THIS VALVE WHEN PRESSURIZED.
ESCAPING GAS COULD IGNITE OR CAUSE VALVE PARTS
TO BLOW OUT OF THE VALVE, CAUSING PROPERTY
DAMAGE, SERIOUS INJURY OR DEATH!**



Dresser™ Pipeline Solutions

41 Fisher Avenue

Bradford, PA 16701

P: 814.362.9200

F: 814.362.9344

www.dresserngs.com

© 2018 Natural Gas Solutions
North America, LLC The Dresser Logo
and all Trademarks containing the ter
'Dresser' are the property of Dresser, LLC
a subsidiary of Baker Hughes, a GE Company.

SEE REVERSE SIDE FOR VALVE INSTALLATION PROCEDURE

-OVER-