


## **! WARNING**

Proper selection of Excess Flow Devices is required. Improper selection can result in a condition that will not allow the device to operate, creating the potential for a dangerous condition if the line is severed.

Be certain of the proper orientation of the excess flow device when installed in the service line. Devices installed backwards will not operate.

**ALWAYS READ ALL OF THE INSTALLATION AND OPERATION INSTRUCTIONS, CAUTIONS AND WARNINGS WHEN SELECTING OR INSTALLING EXCESS FLOW DEVICES! FAILURE TO FOLLOW THE ABOVE WARNINGS COULD RESULT IN IMPROPER OPERATION AND ESCAPING GAS THAT MAY CAUSE PROPERTY DAMAGE, SERIOUS INJURY OR DEATH!**

1. Locate excess flow device as close to main as possible.
2. Orient device with flow arrows toward the residence and away from gas service connection.
3. Device **MUST** be clean and clear of all foreign matter.
4. Install host fitting in accordance with instructions provided or other qualified joining procedures and practices.
5. To prevent activating or damaging the EFV, always introduce **AND** remove test media and natural gas slowly when performing stand-up tests, purge operations and when introducing gas to the service line .

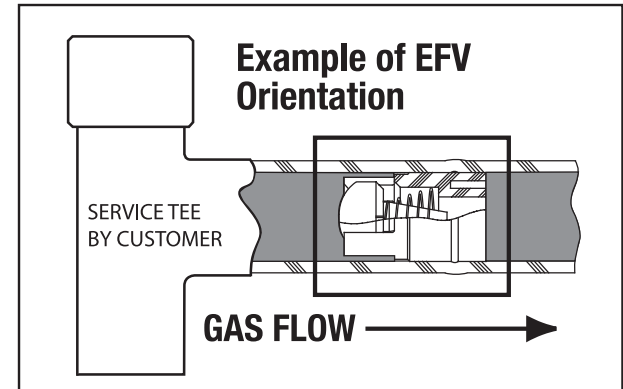

### **Dresser™ Pipeline Solutions**

41 Fisher Avenue  
Bradford, PA 16701  
P: 814.362.9200  
F: 814.362.9344  
[www.dresserngs.com](http://www.dresserngs.com)

© 2018 Natural Gas Solutions North America, LLC. The Dresser Logo and all Trademarks containing the term "Dresser" are the property of Dresser, LLC, a subsidiary of Baker Hughes, a GE Company.

**Part No. 0001-0766-999**  
**BAG.12.2018**