#### **INSTALLATION INSTRUCTION 0001-0794-999**

### **Style 502 Service Head Adapter**

#### When used as a Male Adapter:

- 1. Apply pipe dope to the male pipe thread of the Service Head Adapter and tighten in curb valve or other fitting.
- 2. Cut plastic tubing square & deburr. Tubing must be clean and free of longitudinal scratches for a distance of 4" from the tubing end.
- 3. Mark tubing for proper stab depth. (See Stab Depth chart below)
- 4. Check stiffener to assure it is for wall thickness of tubing being used (See Color Code chart below).
- 5. Install stiffener in the tubing until flange of insert is flush with end of tubing.
- 6. Make sure fitting nut is 1/4" to 5/16" from body contact. Disassembly not required.
- 7. Stab tubing into fitting until it bottoms or the stab marking is inside or not over 3/8" from the untightened nut. STABBING NOTE: This fitting does not grip when the tubing is stabbed. If difficulty is encountered in stabbing, withdraw the tubing & try reinserting again. (Be sure nut is at least 1/4" from body.) After proper stabbing is determined, the nut must be hand tightened to actuate the grip ring for holding the tubing in place during final tightening.
- 8. Hold body with a pipe wrench & tighten the nut until the nut & body firmly contact each other. A sharp increase in resistance will be noted.
- 9. Check stabbing mark on tubing. If mark is over 11/16" from the tightened nut, the fitting must be disassembled. After disassembly, check to see if stab mark length was correct. In reassembly an improperly stabbed fitting, cut off the tubing to eliminate the gripper teeth marks, reassemble parts in proper order (See drawing on other side), remark tubing, and then repeat the connection procedure.

1-3/8

1-1/4

#### **STAB DEPTH CHART COLOR CODE CHART Tubing Wall** CTS 0.D. Stab Stiffener (Any Diameter) Color (IN) (IN) Depth .062 Red 1/2 5/8 2-3/8 .077 Blue 3/4 7/8 2-1/2 .090 Silver 1-1/8 2-5/8 1

.099/.101/.103

.121

Gold

Black




Dresser™ Pipeline Solutions 41 Fisher Avenue Bradford, PA 16701 P: 814.362.9200 F: 814.362.9344 www.dresserngs.com

© 2018 Natural Gas Solutions North America, LLC. The Dresser Logo and all Trademarks containing the term "Dresser" are the property of Dresser, LLC, a subsidiary of Baker Hughes, a GE Company.


2-3/4

When used as a Riser Adapter with pipe stop:


- 1. Install plastic tubing through riser pipe leaving approximately 12" of tubing exposed beyond the top of the riser.
- 2. Cut plastic tubing square & deburr. Tubing must be clean and free of longitudinal scratches for a distance of 4" from the tubing end.
- 3. IMPORTANT: Install riser adapter at the riser BEFORE making up the curb valve or main connection.
- 4. Check stiffener to assure it is for the wall thickness of tubing used. (See Color Code chart below left)
- 5. Install stiffener in the tubing until flange of insert is flush with end of tubing.
- 6. Apply pipe dope to meter riser threads.
- 7. Make sure fitting nut is 1/4" to 5/16" from body contact. Disassembly not required.
- 8. While holding the plastic tubing, near the riser, stab the adapter fitting over the tubing until the stiffener contacts the stop in the fitting. A slight rotation motion will facilitate insertion of the tubing.
- 9. Push the adapter fitting down to the steel riser pipe and tighten the fitting nut. Be careful to tighten only the adapter nut while allowing the body to rotate freely.
- 10. Hold nut with a pipe wrench & tighten the body until the nut & body contact each other. A sharp increase in resistance will be noted.
- 11. Apply pipe dope to the male pipe thread of the Service Head Adapter. Hold the fitting with a pipe wrench and install valve or other meter set fittings.

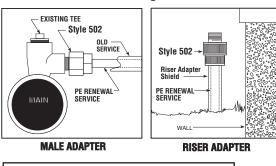


NOTE: Protect from Corrosion per Gas Company Policy and Standards

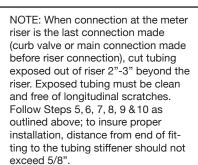

Part No. 0001-0794-999 BAG.10.2018

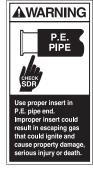



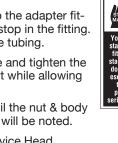

SPECIAL FOR NATIONAL GRID

#### **INSTALLATION INSTRUCTION 0001-0794-999**

### **SPECIAL FOR NATIONAL GRID**

## **Style 502 Service Head Adapter**

#### When used as a Service Head Adapter:


- 1. Remove existing fitting(s) from old service.
- 2. Install plastic tubing through old steel service line from inside the basement or from the street side. Leave approximately 12" of tubing exposed beyond the old service in the basement.
- 3. Cut tubing square & deburr. Tubing must be clean & free of longitudinal scratches for a distance of 4" from the tubing end.
- 4. IMPORTANT: Install Service Head Adapter in the basement before making up the curb valve or main connection.
- 5. Check stiffener to assure it is for wall thickness of tubing used. (See Color Code chart)
- 6. Install stiffener in tubing until flange of insert is flush with the end of tubing.
- 7. Apply pipe dope to old service threads.
- 8. Make sure fitting nut is 1/4" to 5/16" from body contact. Disassembly not required.
- While holding the plastic tubing near the old service line, stab the Service Head Adapter over the tubing until the stiffener contacts the stop in the fitting. A slight rotating motion will facilitate insertion of the tubing.
- 10. Push the Service Head Adapter up to the old service line, this will force excess tubing to the street side, and tighten only the adapter nut while allowing the body to rotate freely.
- 11. Hold nut with a pipe wrench & tighten the body until the nut & body firmly contact each other. A sharp increase in resistance will be noted.
- 12. Apply pipe dope to the male pipe thread of the Service Head Adapter. Hold the fitting with a pipe wrench and assemble the other service line fittings.




NATURAL GAS SOLUTIONS

Dresser™ Pipeline Solutions 41 Fisher Avenue Bradford, PA 16701 P: 814.362.9200 F: 814.362.9344 www.dresserngs.com

© 2018 Natural Gas Solutions North America, LLC. The Dresser Logo and all Trademarks containing the term "Dresser" are the property of Dresser, LLC, a subsidiary of Baker Hughes, a GE Company.

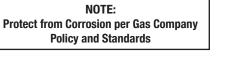

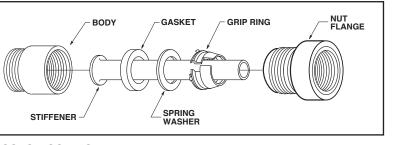

# COLOR CODE CHART Tubing Wall Stiffend





P.E. TUBE Voltorial Voltor

#### **SERVICE HEAD ADAPTER**

**NOTE:** When connection at the service head is the last connection made (curb valve or main connection), cut tubing exposed 2"-3" beyond the service head. Exposed tubing must be clean and free of longitudinal scratches. Follow Steps 6 thru 12 as outlined at left; to insure proper installation, distance from end of fitting to the tubing stiffener should not exceed 5/8".

Part No. 0001-0794-999 BAG.10.2018