

How to - Corus Evo+

How to find Modbus registers map

815-0000-10

AA


1. Run **Wincor Evo** software in **Standard** mode.




- a. From **Device configuration** select **Parameters from device**.



b. Select **System parameters**.

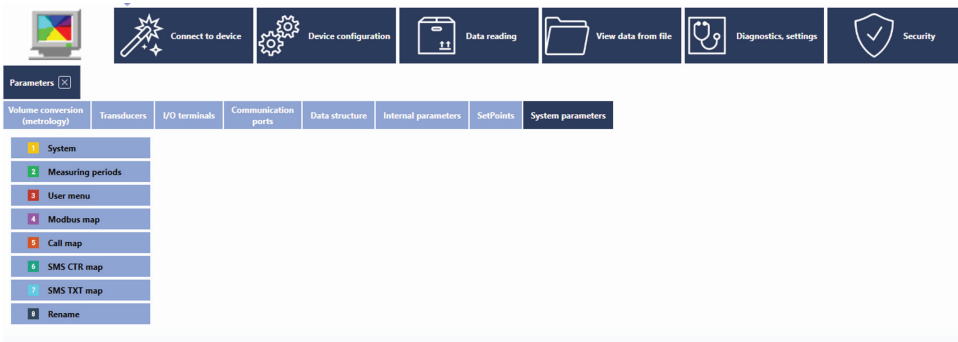

c. Select **Modbus Map**.

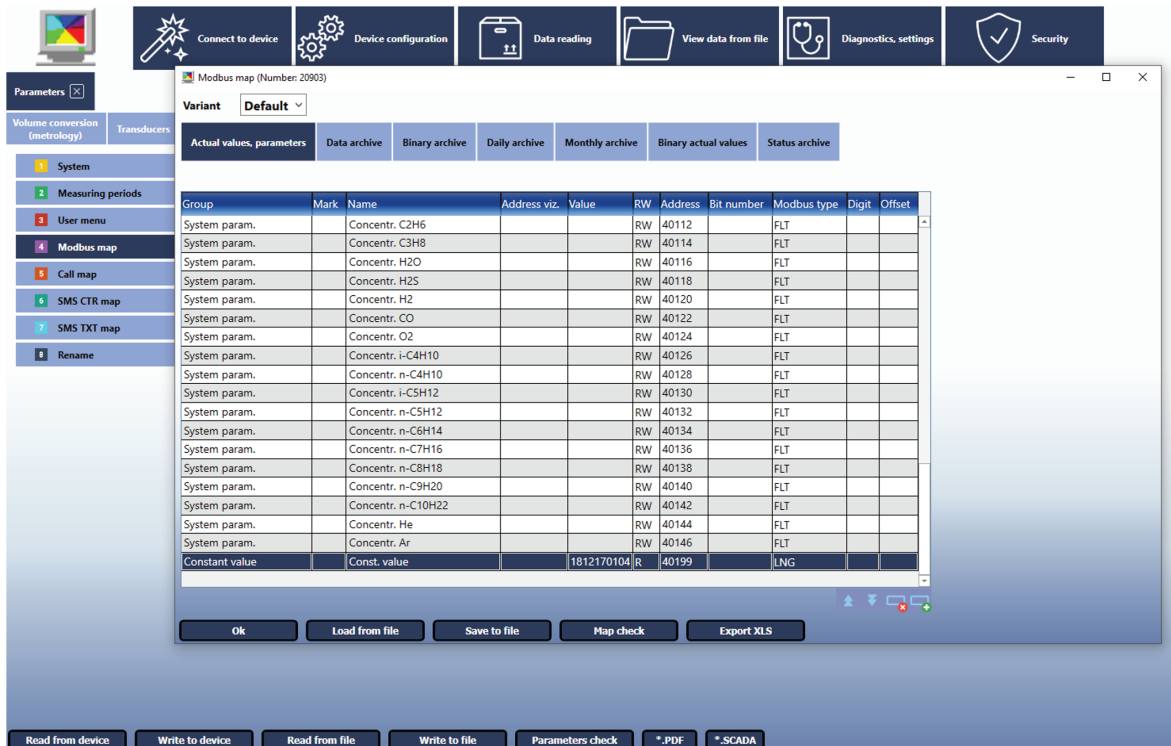

- Different **Variants** are available from the dropdown list. The example above shows the default register map.
- There are different registers for each tab such as **Actual values**, **Data archive**, **Binary archive** etc. Click to view as you wish.
- New maps can be uploaded, or changes to existing ones saved using the selection buttons on the bottom of the Modbus map screen.

Dresser Utility Solutions GmbH

Hardeckstr. 2
76185 Karlsruhe
T: +49 (0)721 / 5981 - 0
info.karlsruhe@dresserutility.com



© 2026 Dresser Utility Solutions GmbH – All rights reserved. Dresser Utility Solutions reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Dresser Utility Solutions representative for the most current information. The Dresser Logo and all Trademarks containing the term "Dresser" are the property of Dresser, LLC, a subsidiary of Baker Hughes. Actaris™ is a trademark owned by Itron, Inc. and used under license.

815-0000-10 AGM How to find Modbus register maps DUS.AGM.EN.AA
06.26