


INSTALLATION INSTRUCTION 0001-0835-999

Style 88 Service Head Adapter

1. Remove all burrs from end of plastic tubing I.D. and O.D. and clean tubing surface for a distance of four inches from tubing ends with a clean, dry, grease-free cloth.
2. Loosen nut about one-quarter turn and make sure gasket is free.
3. DO NOT LUBRICATE GASKET.
4. Push lock insert into plastic tubing until tubing end is firmly in contact with insert flange. Use proper wall thickness insert for the plastic tubing. The wall thickness is marked on the insert.
5. Stab plastic tubing with insert in position until the flange face of insert is flush with the face of the loosened nut.
6. Tighten nut until it is iron bound with body.

NOTE: Style 88 Service Head Adapters and Basement Tees for plastic pipe are recommended for a maximum operating pressure of 125 PSIG and a maximum temperature of 150° F.

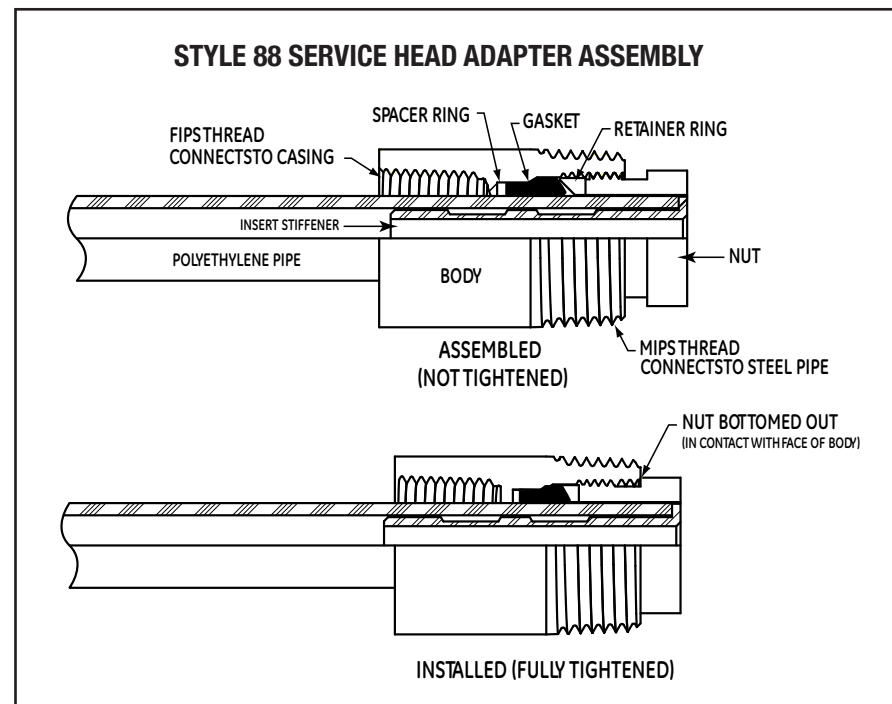

Dresser™ Pipeline Solutions

41 Fisher Avenue
Bradford, PA 16701
P: 814.362.9200
F: 814.362.9344

www.dresserngs.com

© 2018 Natural Gas Solutions North America, LLC.
The Dresser Logo and all Trademarks containing the term "Dresser" are the property of Dresser, LLC, a subsidiary of Baker Hughes, a GE Company.

PIPE SIZE NOM.	PIPE O.D. (IN)	MAX. WALL MD 2406	MAX. WALL HD 3408
1/2	5/8	.090	.090
1	1-1/8	.090	.101
1-1/4	1-3/8	.090	.090

Part No. 0001-0835-999
BAG.10.2018